



Iso-level Feet

Setup Guide

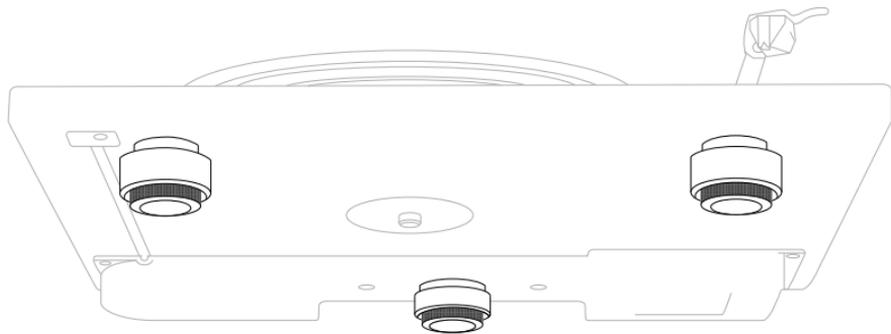

1 Getting started


- A Unplug turntable. Remove belt, platter, and spindle.
Secure tonearm to tonearm rest using twist tie (included).
- B With dust cover attached and closed, flip turntable upside down. Place on a soft surface like a towel to avoid scratching dust cover.
- C Use a #2 Phillips-head screwdriver (not included) to unscrew and remove original rubber feet and screws.

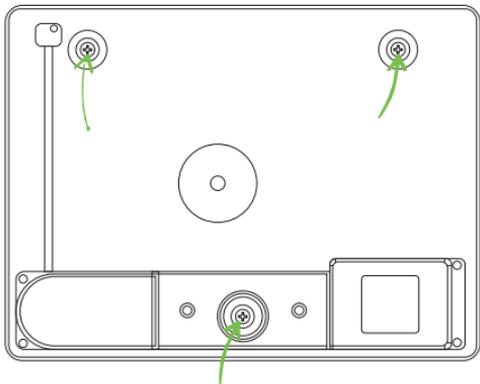

2 Pick screw size

Original foot screws need to be replaced. There are two replacement screw sizes included. Use the guide below (actual sizes shown) to determine which screw size to use.


Size #6

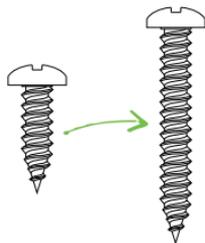

original

new

Size #14

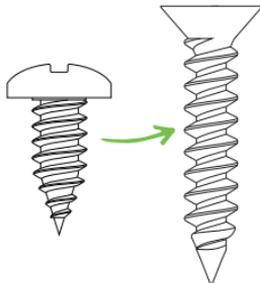


original

new

actual size


3 Install foot housings

Remove plastic film from Sorbothane pads. Screw housings into bottom of plinth until firmly seated using a #2 Phillips-head screwdriver. Do not overtighten screws.

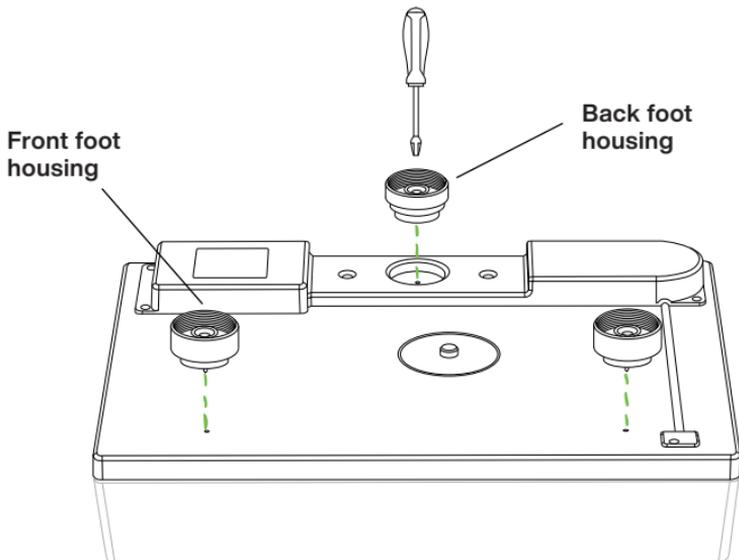


4 Install feet

Screw feet into housings until red O-ring is no longer visible.

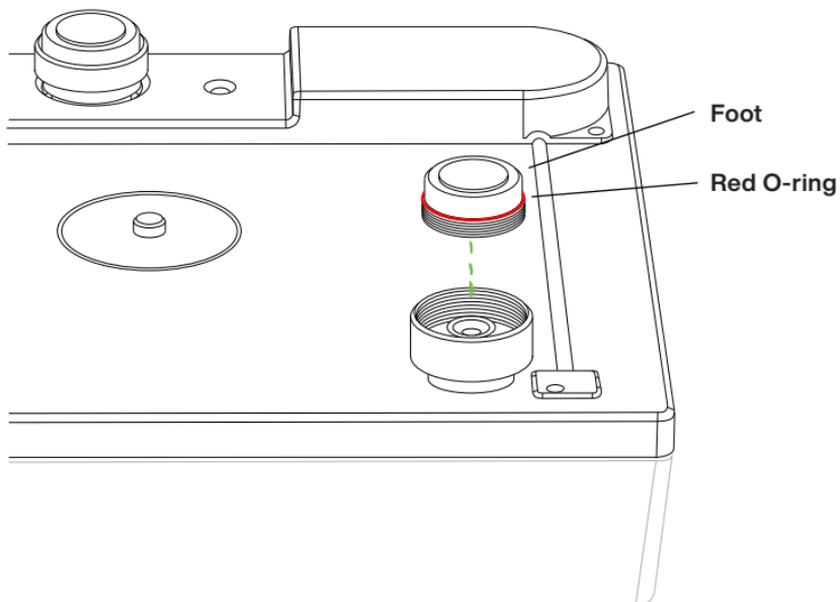

5 Level turntable

Place turntable on a stable surface and install spindle, platter, and belt. Position bubble level (included) anywhere on top of plinth.

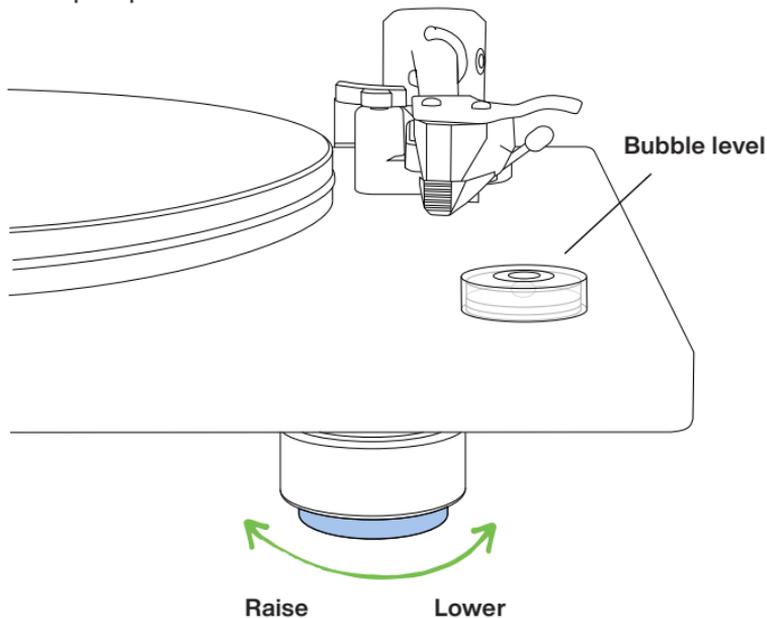

6 Level turntable continued

If the bubble is not centered, adjust the height of the feet to level turntable. Turn bottom of foot to raise or lower it.

Bubble position	Adjustment
	Turntable is level
	Lower back foot or raise front feet
	Raise front left foot or lower front right and back foot

Additional support



Setup videos & tutorials

uturnaudio.com/learn



Email

support@uturnaudio.com



Phone

(781) 451-1445



We stand by our products with a 3-year warranty that covers any defects in materials or workmanship.