



Orbit Turntable Setup Guide

1 Initial setup

- A Place the platter on the center spindle.
- B Slide the dust cover onto the hinges.
- Connect the power adapter to the jack on the back of your Orbit.
- Connect to your sound system using the included RCA cables.

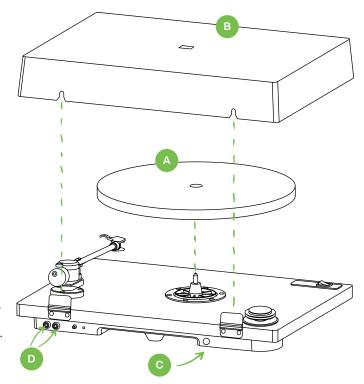


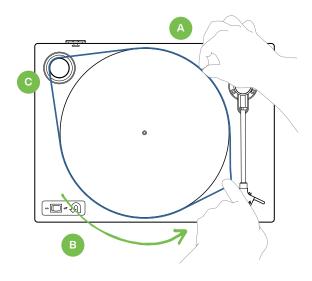


2 Belt installation and changing speeds


- Wrap the belt around the pulley groove. Then hold the belt along the platter's back edge with your right hand.
- Keeping your right hand in place, use your left hand to guide the belt around the edge of the platter.
- To change speeds, move the belt to the top pulley groove (33 RPM) or bottom groove (45 RPM).

The belt should be relatively loose – this helps prevent motor vibrations from reaching the stylus and minimizes platter speed variation. Avoid pulling on the belt or pulley during installation.

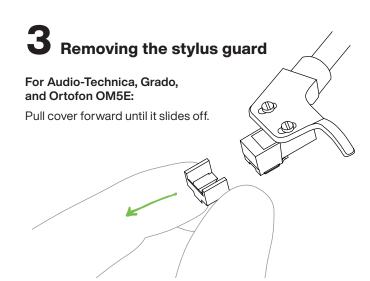


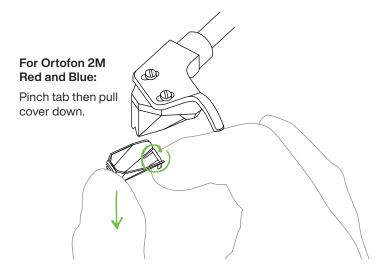

Using the built-in phono preamp

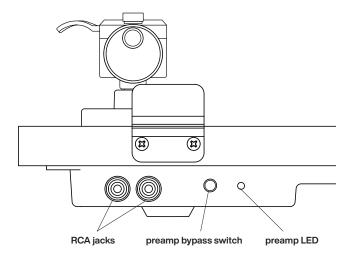


The built-in preamp is set to "on" out of the box. To disable it, press the bypass switch. The preamp is enabled when the LED light is on.

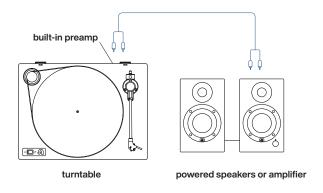


With the built-in preamp enabled, you can connect your Orbit directly to powered speakers or an amplifier using the included RCA cables.

Using an external phono preamp

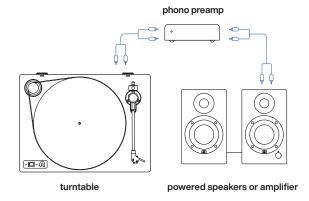

If your Orbit doesn't have a built-in preamp, you can connect it to a standalone phono preamp then connect to powered speakers or an amplifier.

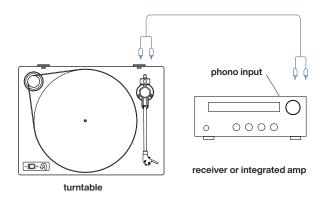

You can also connect your Orbit directly to any receiver or amplifier that has a clearly marked "phono" input on the back.

Additional support



Setup videos & tutorials uturnaudio.com/orbit-setup



Email support@uturnaudio.com



Phone (781) 451-1445

3-year warranty



We stand by our turntables with a 3-year warranty that covers any defects in materials or workmanship.

You can view our full warranty policy at uturnaudio.com/warranty.

If you need warranty service, please contact us at support@uturnaudio.com or by phone at (781) 451-1445.